




TAC80B-J, K, T

Thermocouple to Analog Converter

Operator's Manual M1710/0394

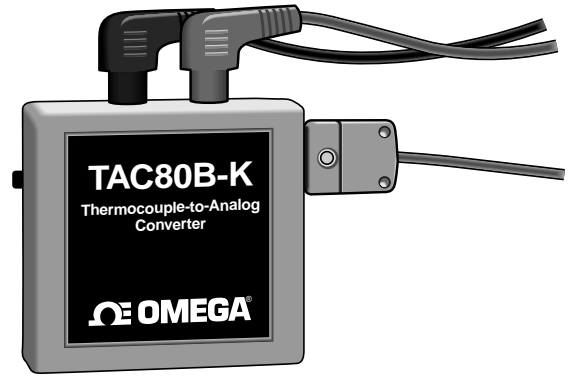

GENERAL DESCRIPTION

The OMEGA® TAC80B-J, K, T Thermocouple to Analog Converter can turn any chart recorder, analog or digital voltmeter into an accurate, wide range temperature measuring instrument. It is powered by either an internal 9 volt battery or an optional power adapter (TAC80B-AC). The TAC80B is a universal thermocouple amplifier and linearizer which provides a precision 1mV/°C or °F signal for type J, K or T thermocouples. Cold junction compensation is built in. Each unit is supplied with mating connector, standard-to-miniature connector adaptor, and 9V battery.

UNPACKING

Remove the Packing List and verify that you have received all items. If you have any questions about the shipment, call the Customer Service Department. When you receive the shipment, inspect the container and equipment for any signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

NOTE: The carrier will not honor any claims unless all shipping material is saved for their examination. After examining and removing contents, save packing material in the event reshipment is necessary.

INSTALLATION

1. Connect the TAC80B to the strip chart recorder or meter. The HI plug connects to the HI (+) receptacle and the LO plug to the LO (-) receptacle.
2. Plug the thermocouple into the SMP socket on the TAC80B.

OPERATION

CAUTION: When the range switch is in the TEST position (center), full battery voltage (9V) is applied to the output. The power switch must be in the OFF position before switching from °F to °C or vice-versa (see Figure 1-1).

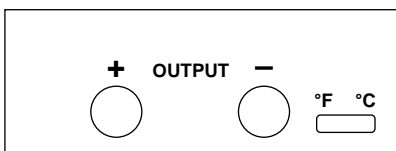


Figure 1-1. °C/°F Switch

Multimeter Use

1. For temperatures less than 200°C or 200°F, set the multimeter range to 200 mV.
2. For temperatures greater than 200°C or 200°F, set the multimeter range to 2 V.

Temperature is read directly on the multimeter in °C or °F; the TAC80B converts the mV signal into a temperature measurement displayed in °C.

Strip Chart Recorder Use

To use the TAC80B with a strip chart recorder, set the recorder span to the mV range that corresponds to the mV output at that temperature to be measured. For example, to read between 50°C and 150°C, set the range to 100 mV in the CALIBRATE mode and suppress the zero by 50 mV.

NOTE: Output is 1 mV per °C or 1 mV per °F.

SPECIFICATIONS

RANGES:	Type J: -4° to 1112°F (-20° to 600°C)
	Type K: -4° to 1832°F (-20° to 1000°C)
	Type T: -4 to 572°F (-20° to 300°C)
OPERATING TEMPERATURE:	0° to 50°C
POWER:	9V alkaline
INPUT CONNECTION:	SMP connector, standard to SMP adaptor supplied
OUTPUT CONNECTION:	Standard banana plug or jack
STORAGE TEMPERATURE:	14° to 122°F (-10° to +50°C)
OUTPUT:	1 mV per °C or °F
ACCURACY:	Type J: ±2.6°C, ±4.3°F
	Type K: ±3.6°C, ±6.1°F
	Type T: ±1.8°C, ±3.0°F
COLD JUNCTION COMPENSATION:	0.05°C/°C
DIMENSIONS:	H: 2.25" (57mm) x W: 2.4" (71mm) x D: 1" (25mm)
WEIGHT:	6 oz.

CALIBRATION

Equipment required: 3-1/2 or 4-1/2 digit multimeter with $\pm 0.1\%$ accuracy, stable voltage source, TRC III Ice Point™ Cell, TRP (J, K, T) Reference Probe.

Set up the equipment as shown below. Set the Function Switch to "°C" or "°F" position. Turn power on. Set voltage source and adjust potentiometers as follows.

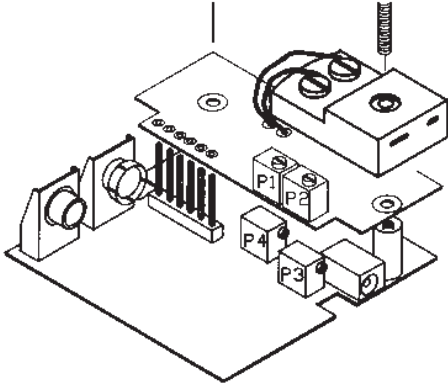


Figure 1-2. Potentiometer Locations

Set Voltage Source Adjust for Multimeter Reading

Model TAC80B-J

°C	0.000 mV	P1	00.00 mV
	33.102 mV	P2	600.0 mV
°F	0.000 mV	P4	32.00 mV
	33.102 mV	P3	1112.0 mV

Model TAC80B-K

°C	0.000 mV	P1	00.00 mV
	37.325 mV	P2	900.0 mV
°F	0.000 mV	P4	32.00 mV
	37.325 mV	P3	1652.0 mV

Model TAC80B-T

°C	0.000 mV	P1	00.00 mV
	14.862 mV	P2	300.0 mV
°F	0.000 mV	P4	32.0 mV
	14.862 mV	P3	572.0 mV

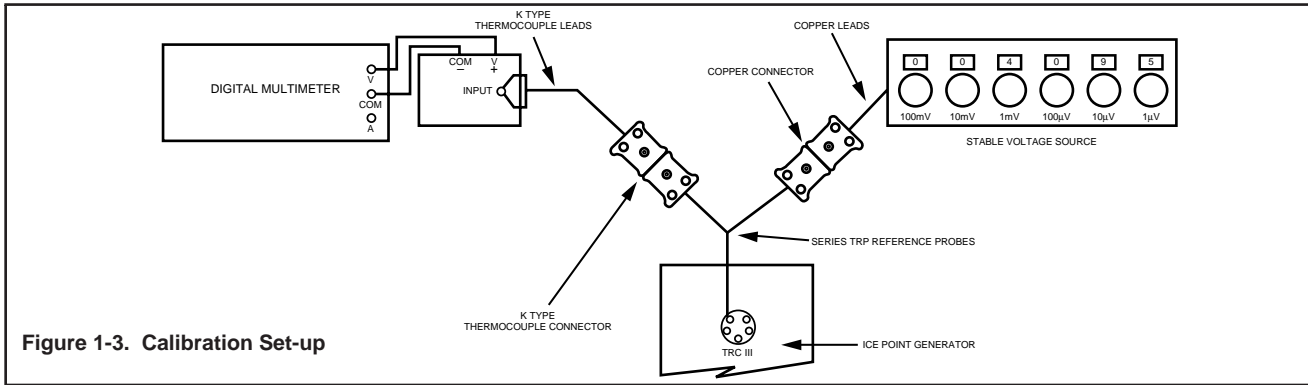


Figure 1-3. Calibration Set-up



WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

We are glad to offer suggestions on the use of our various products. Nevertheless, OMEGA only warrants that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of buyer set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

SPECIAL CONDITION: Should this equipment be used in or with any nuclear installation or activity, buyer will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.



Servicing USA and Canada: Call OMEGA Toll Free

USA

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Telephone: (203) 359-1660
FAX: (203) 359-7700

Canada

976 Bergar
Laval (Quebec) H7L 5A1
Telephone: (514) 856-6928
FAX: (514) 856-6886

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA™
Customer Service: 1-800-622-2378 / 1-800-622-BEST™
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN™
TELEX: 996404 EASYLINK: 62968934 CABLE OMEGA

Servicing Europe: United Kingdom Sales and Distribution Center

25 Swannington Road, Broughton Astley, Leicestershire
LE9 6TU, England
Telephone: 44 (0455) 285520 FAX: 44 (0455) 283912

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA ENGINEERING Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems you are having with the product.

FOR NON-WARRANTY REPAIRS OR CALIBRATION, consult OMEGA for current repair/calibration charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair/calibration,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems you are having with the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1995 OMEGA ENGINEERING, INC. All rights reserved. This documentation may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.